





## What you need:

- SRAM AXS derailleur + optional dropper
  - SRAM BlipBox
  - Zirbel Twister WE01 controllers
- Intend Grace XC (77mm) or CC (90mm) stem
- Schmolke Carbon handlebar for internal routing

## Step one:

Carefully sand the edges on the BlipBox so that it can be inserted through the rear of the stem.

Only so that it just fits.





The Schmolke handlebar can be ordered with just a center hole for routing under foam grips, or with additional holes by the brake levers.


In the first case, use a Dremel to make two small

Route the cables, remember to install any brake levers or remotes first that are to sit on the inside of the Zirbel controllers.

slots for the cables in the bar end.

## Step three:

Slide the handlebar into the stem and thread the cables through the clamp.

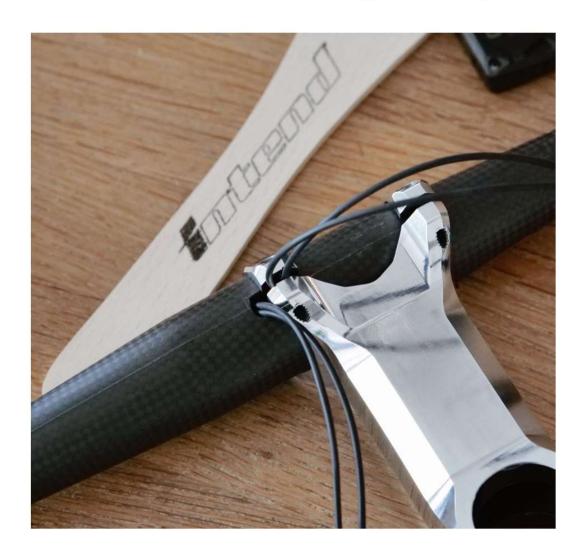




Step four:


Rotate the handlebars and thread the cables through the stem.

## Step five:

Connect the cables to the BlipBox.

At this point you want to pair everything, set it up with the AXS app and possibly micro adjust the derailleur.

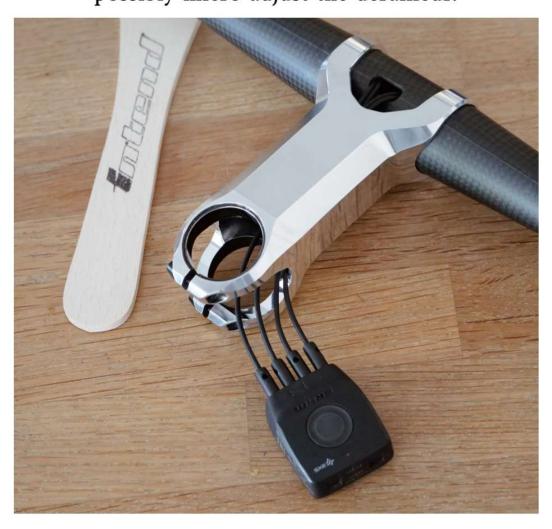

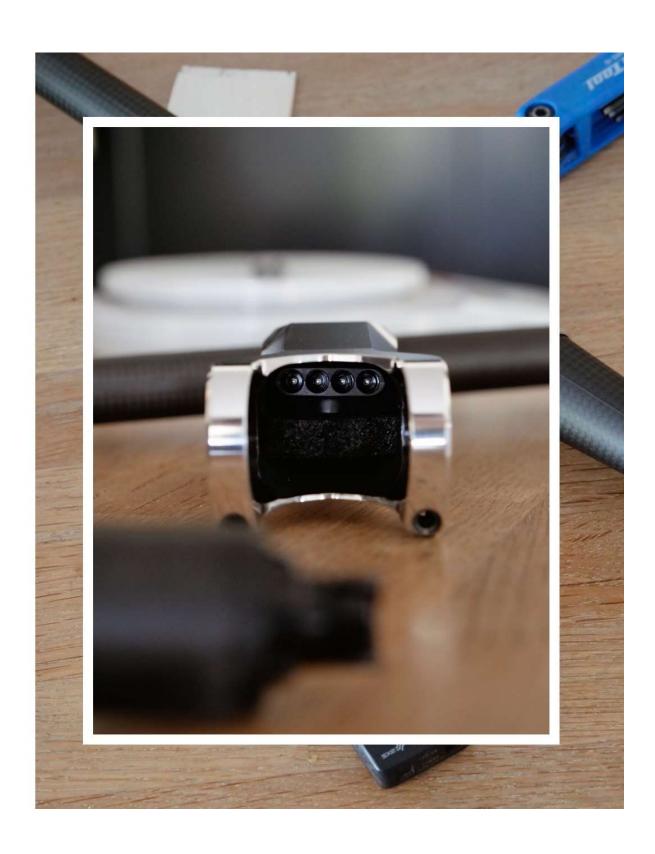



Step six:

Push the BlipBox into the stem.

Tip: put a piece of foam in there from the beginning to keep it from rattling.

Install on your bike, install grips etc - DONE.



